

# Fitting Replacement Ercol Webbing Straps

**1. Remove old straps** remembering to keep dowels  
You will need a length of string or some customers have recommended a bent coat hanger, an old flat screwdriver or similar and lubricant




**2. Your new straps** unless all same size or obvious will have size on back

**3. You are now ready to fit new straps** lubricate ends of straps and slots to reduce friction between strap and slot any lubricant will do even soap or washing up liquid




**4. Fitting** starting with the centre strap position loop through slot at back of chair and insert dowel and pull tight Thread your piece of string or similar (bent coat hanger) through the remaining loop and then through the slot you will need to pull the loop through (an extra pair of hands is helpful at this point) the screwdriver might also help to hold the loop as you push the dowel into place remove the string and your strap is fitted

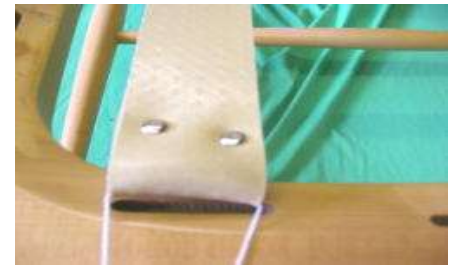

**5. Fit straps either side of centre** (where strap lengths vary these two will be similar length) continue fitting away from the centre

**6. Fitting straps from side to side** as above weave through back to front straps for added strength you will need to stretch the webs as you are weaving them through

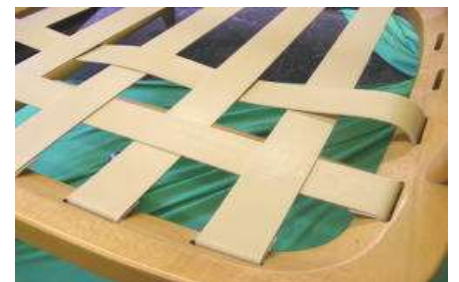

**Your straps are now fitted**

